



EL-13

550

***Disconnect your battery before installation!***

#### **SUBSTITUTE FLASHER RELAY CONNECTIONS**

**oem 49** is power- **green w black** = **X terminal**

**oem 49a** feeds the turn signal switch that sends power to the 2 left or 2 right lamps- = **green w yellow** = **L (load) terminal**

**oem C** goes to the instrument pod- **black w white** = **P (pilot) terminal**

**oem 31** is ground- **brown** = no pin on substitute relays, not required on 3 pin